


T8

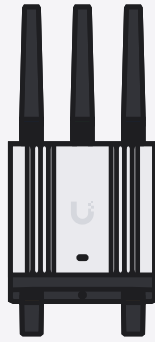

1





1x


a



1x

e

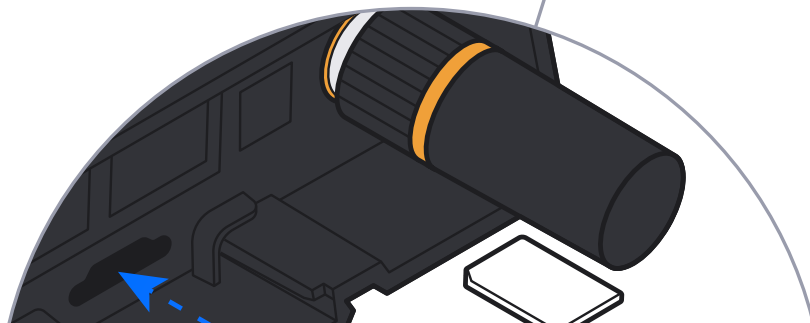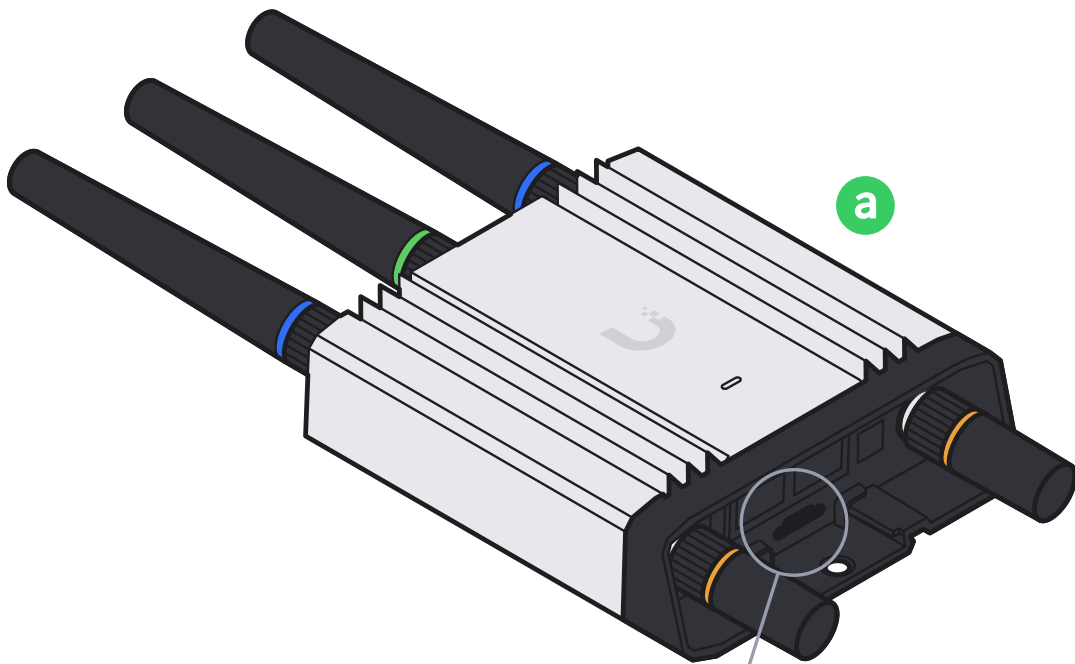


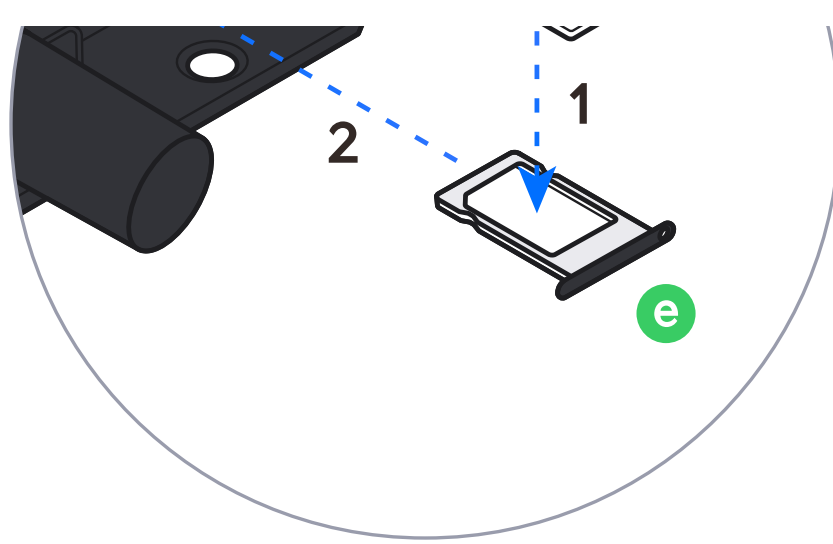

2






1x

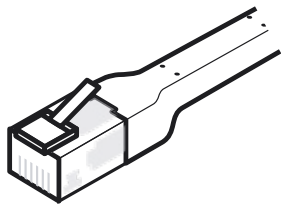


UniFi Patch Cable

[Buy >](#)

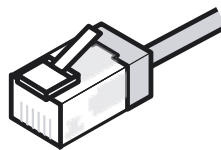


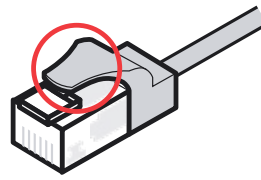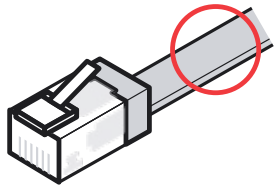

A

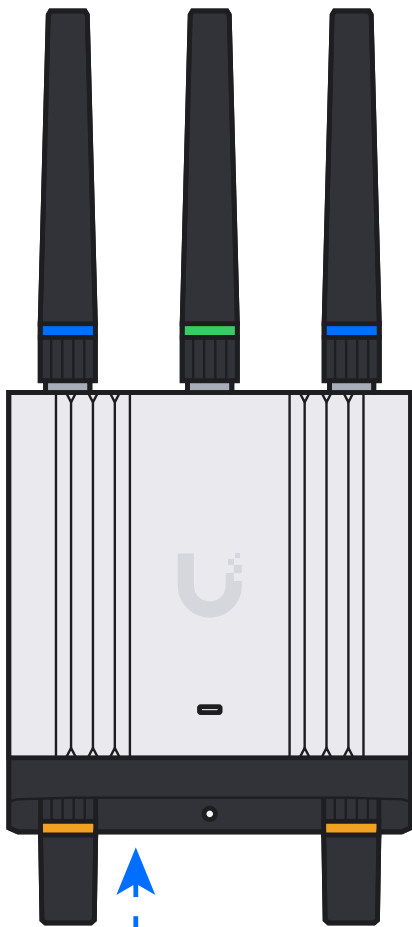




B


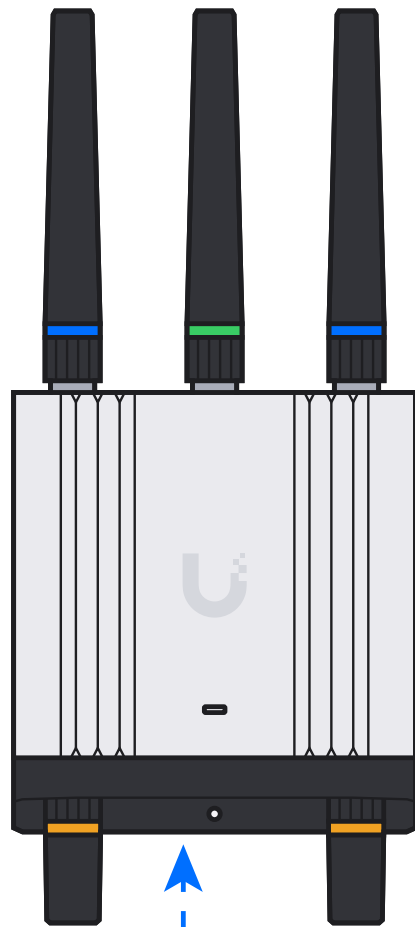




C



D

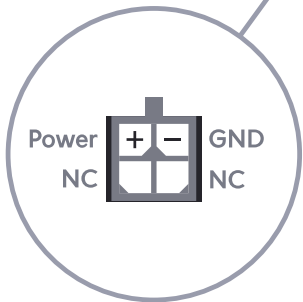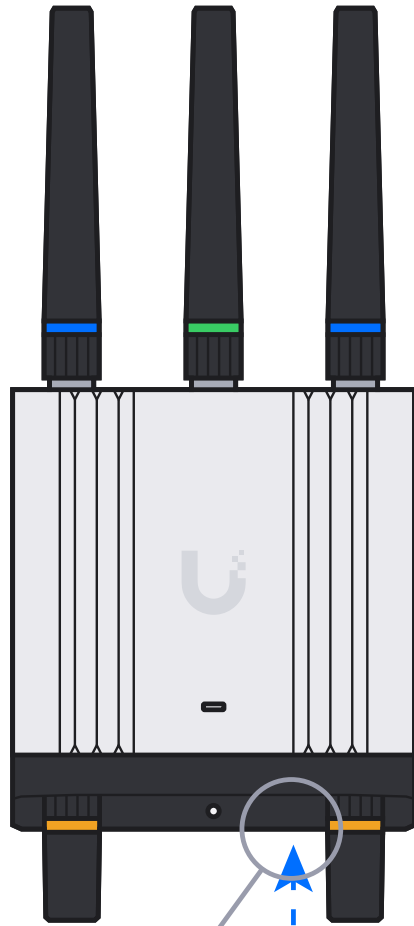
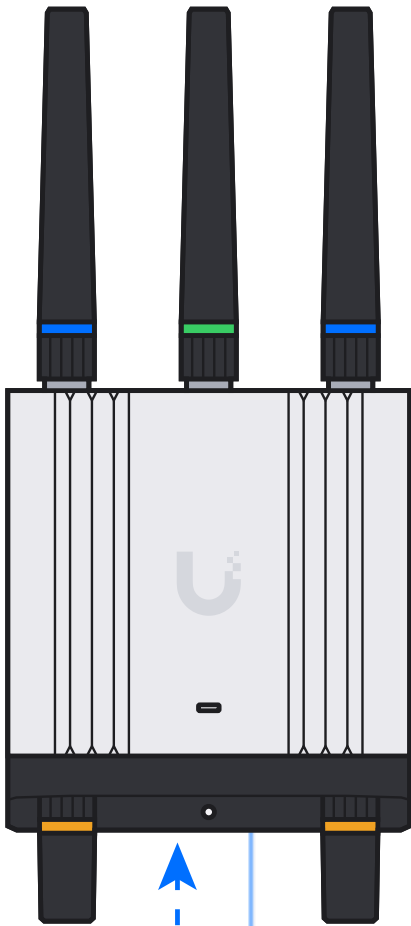


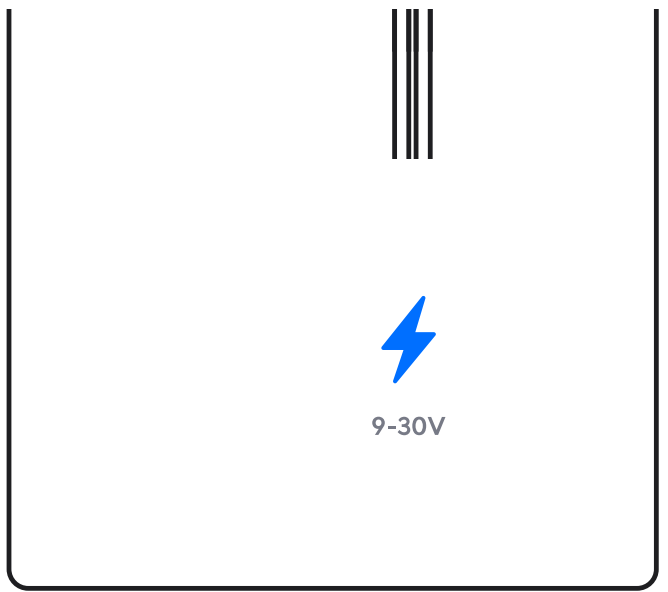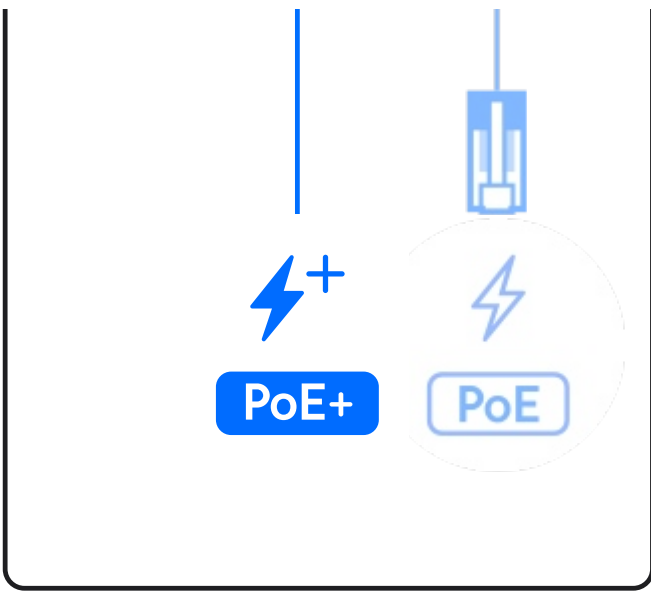

Power on and initialize (up to 2.5 min).

3

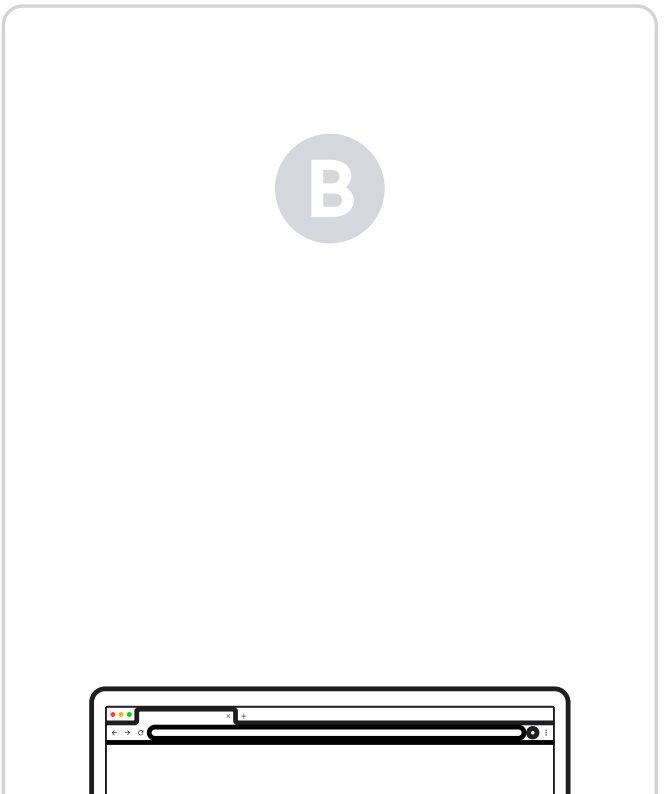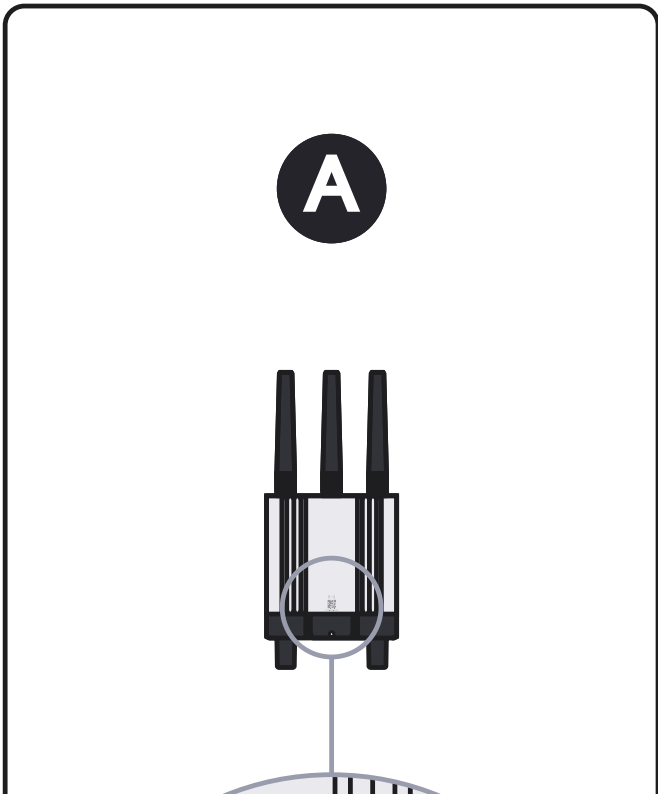


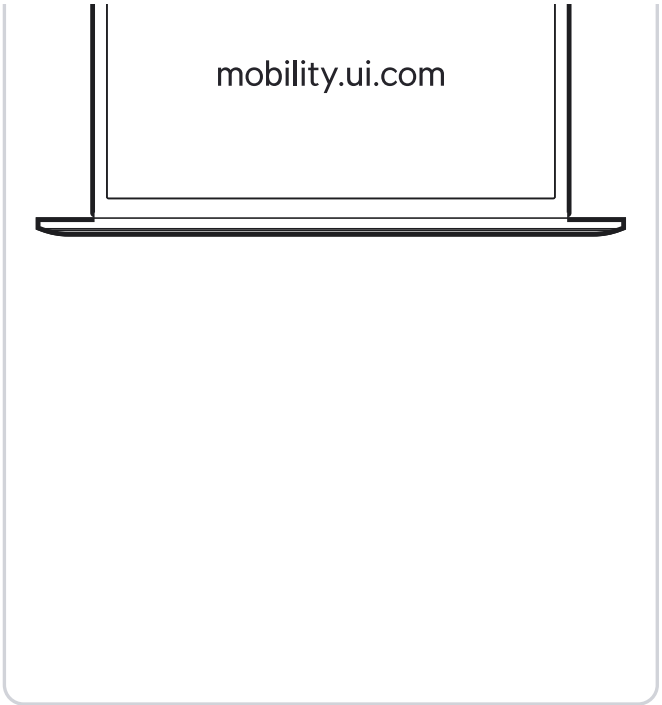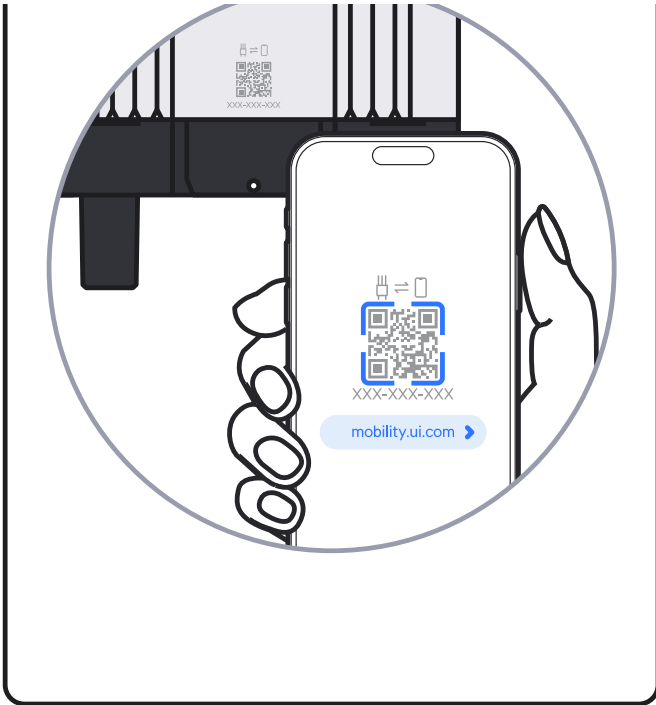


4



1x

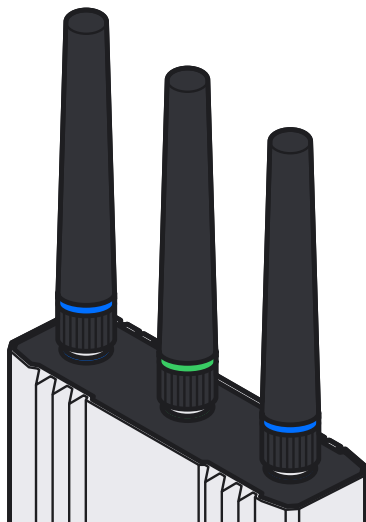


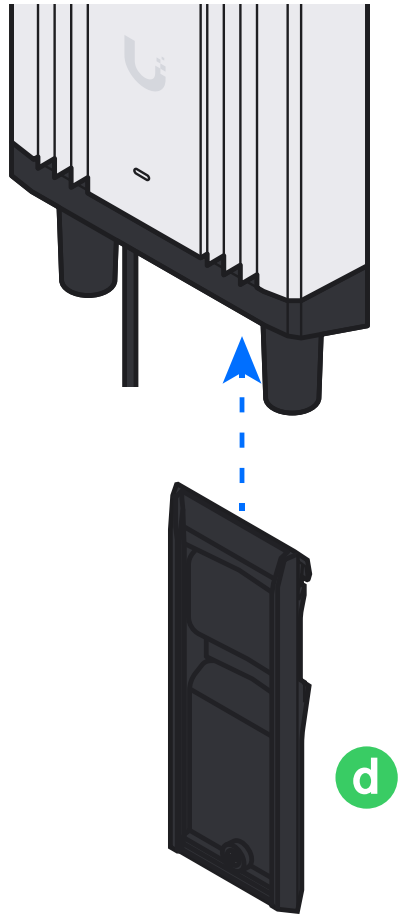


5


★
M2.5
1x
f



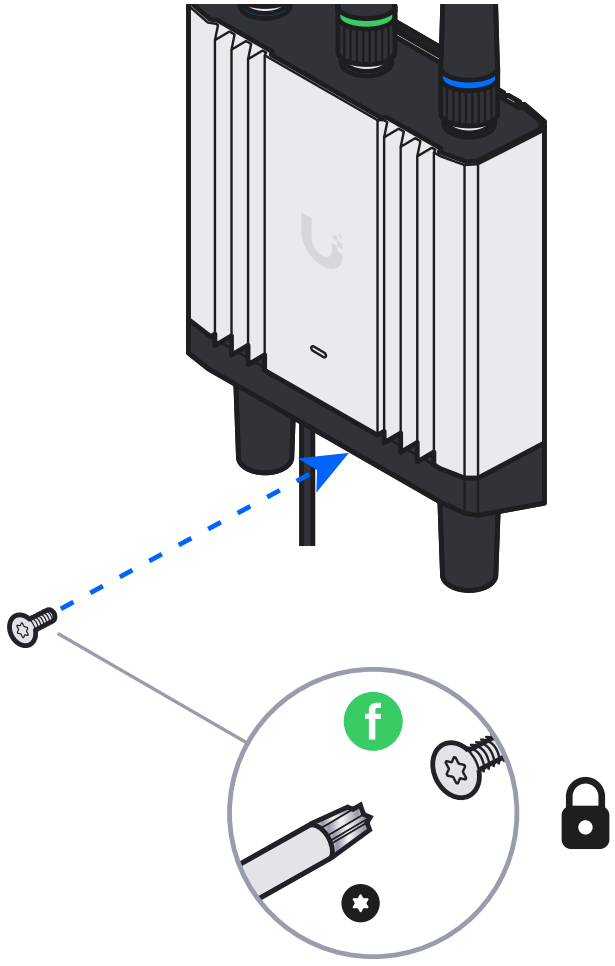


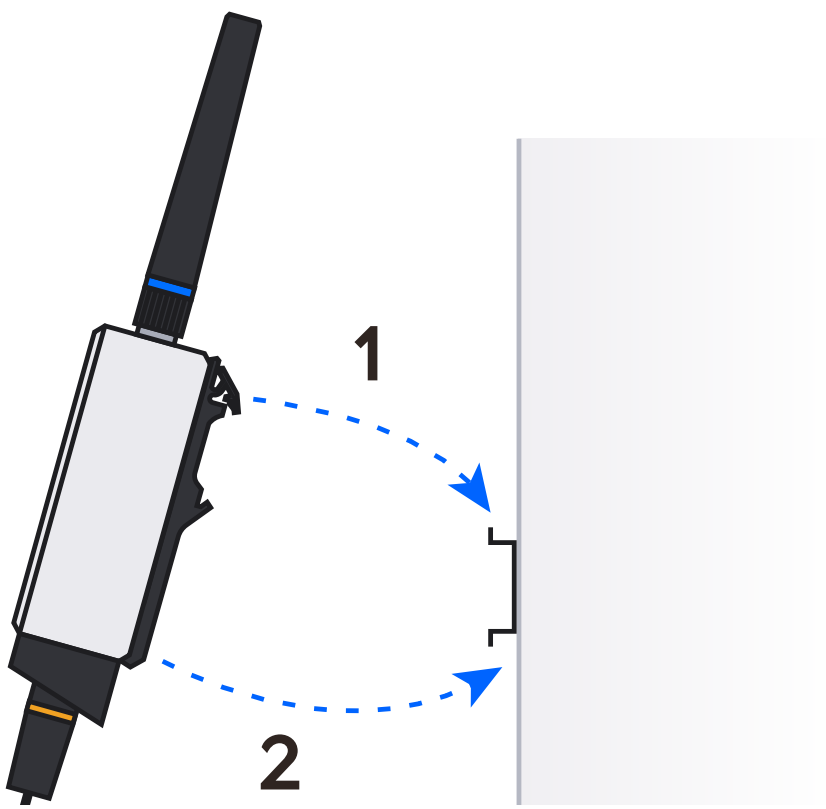


6

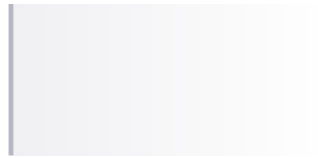

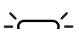


-  Steady White Device ready for setup.
-  Steady Blue Setup successful. Continue at mobility.ui.com.
-  Flashing White Unable to activate SIM. Check SIM PIN and APN.
-  Flashing Blue Unable to connect to the LTE network

Relocate the device or contact your ISP.

For more details please visit mobility.ui.com/doc/led.


8mm

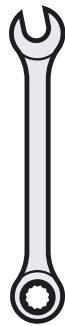


External WiFi Antenna
(RP-SMA Male Type)





1

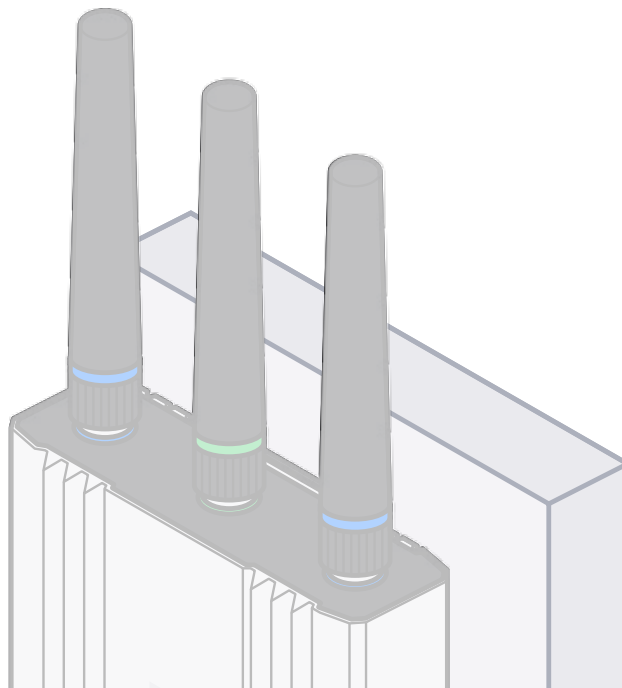

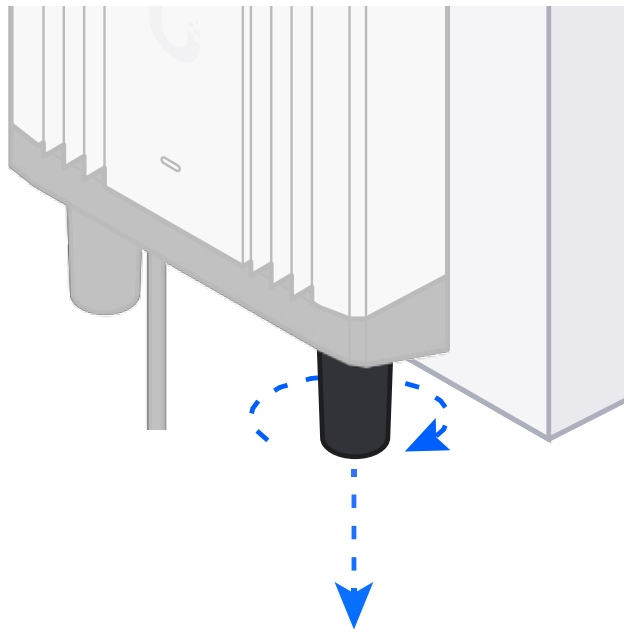


2

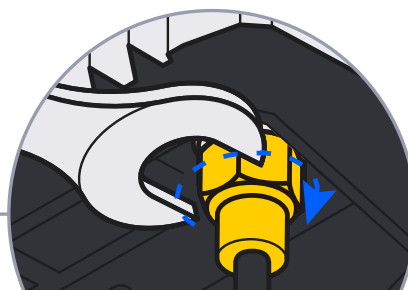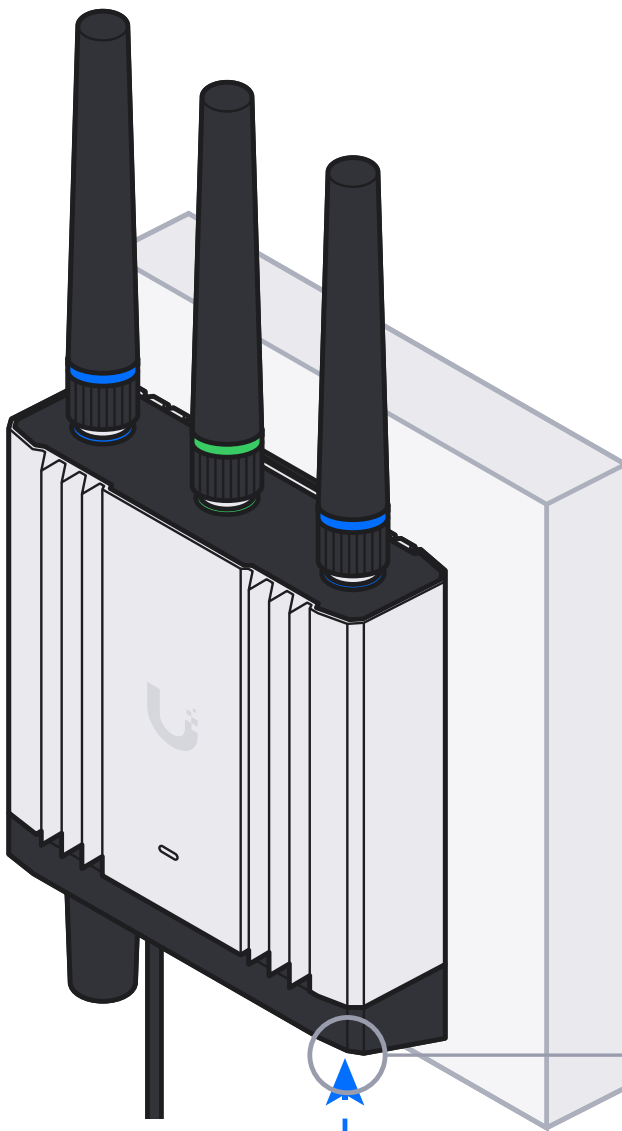


0.2 Nm






1x

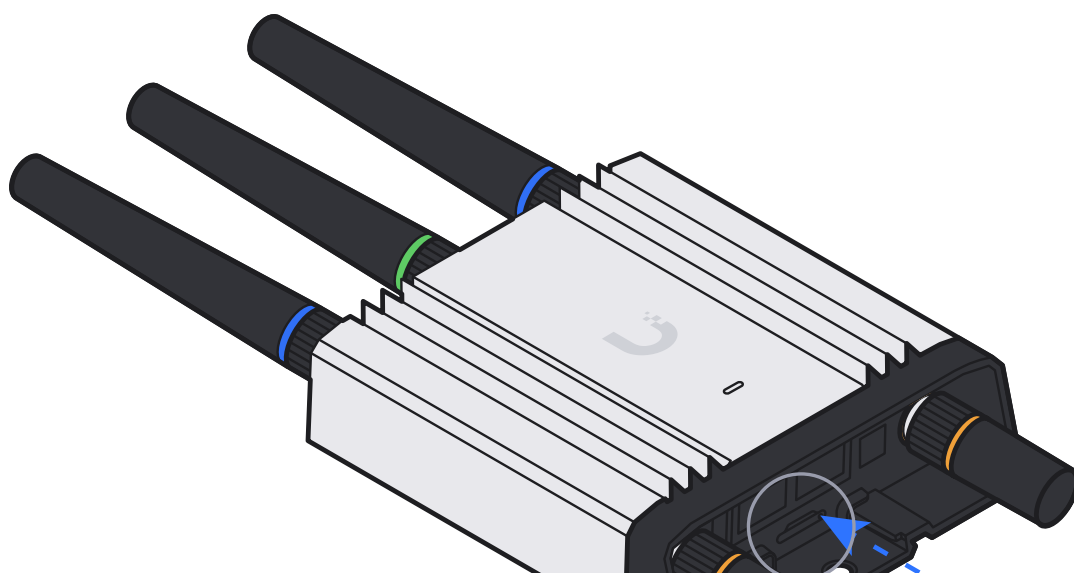


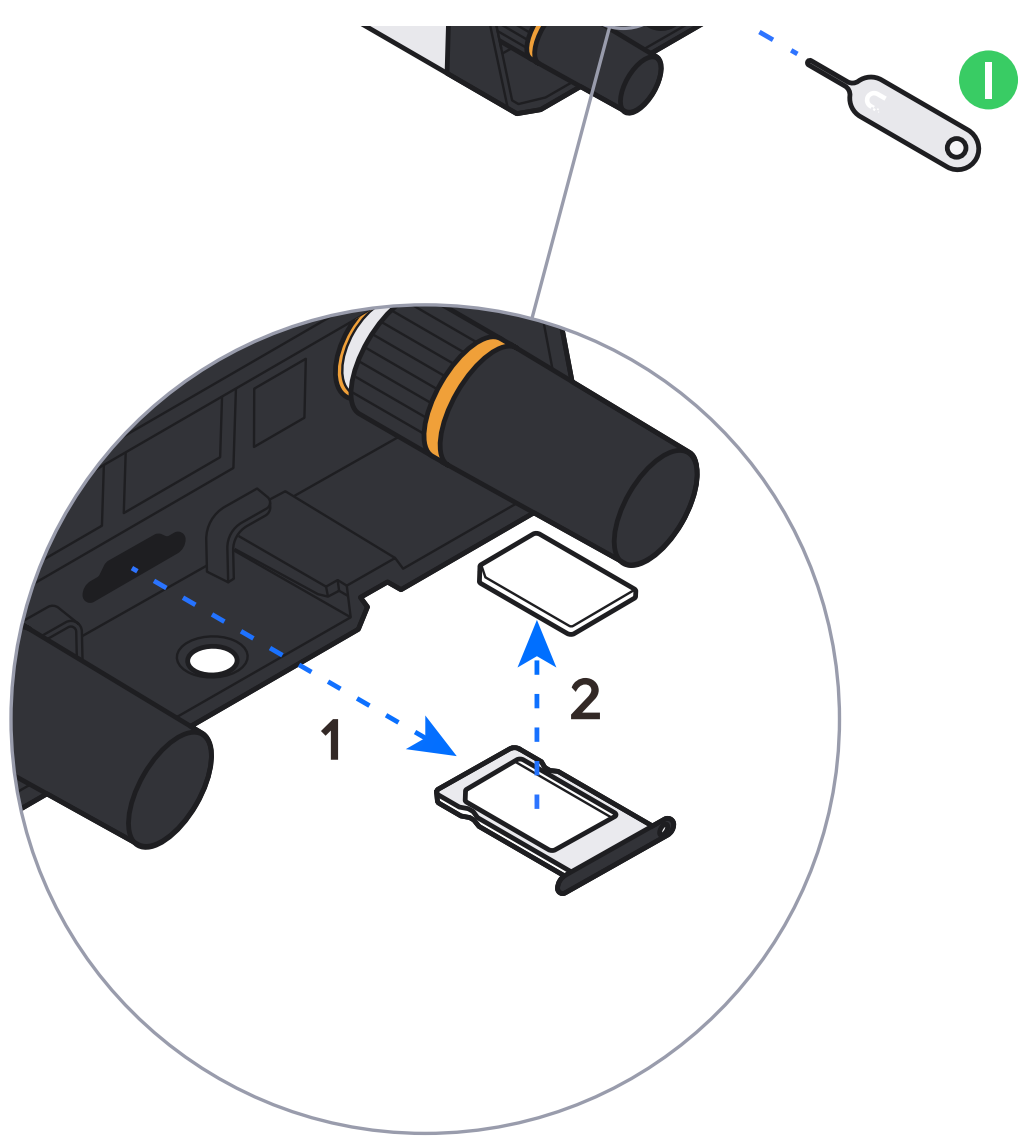

1x

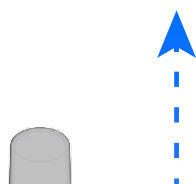

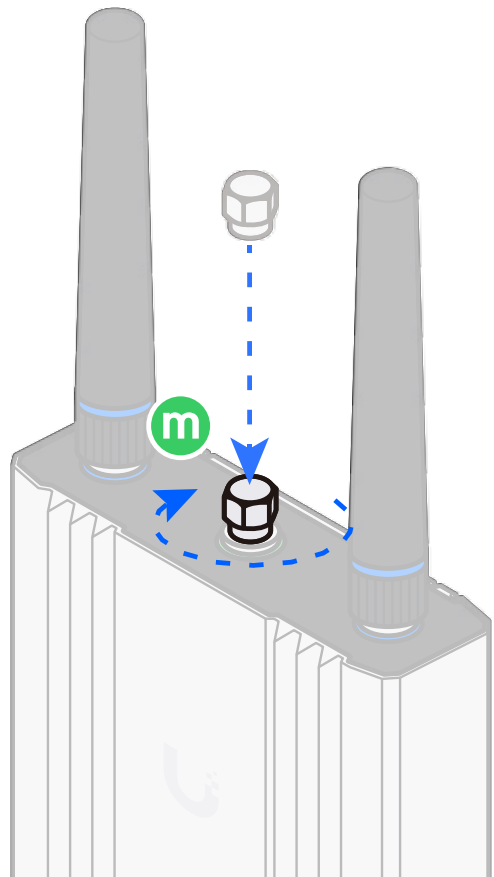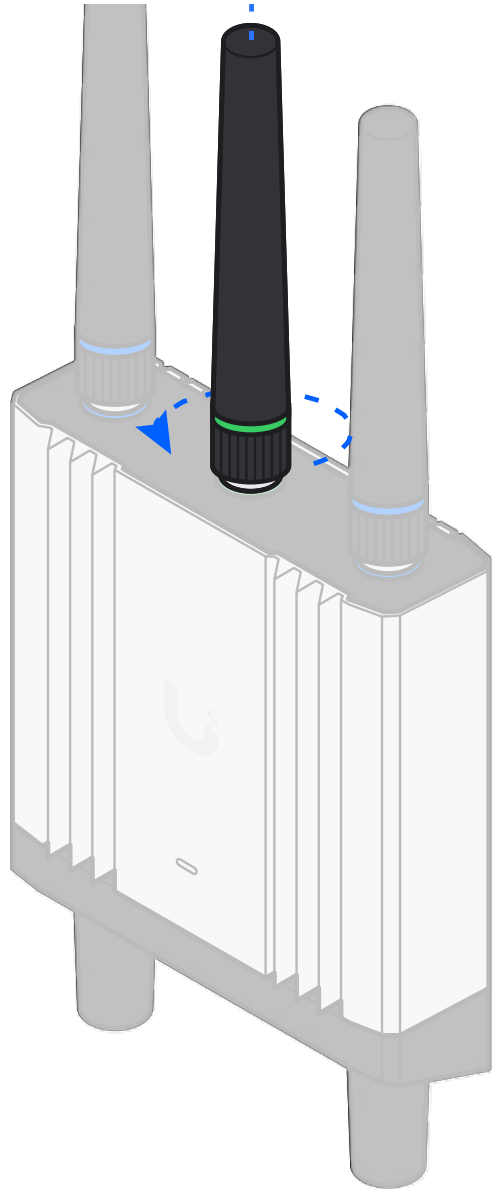

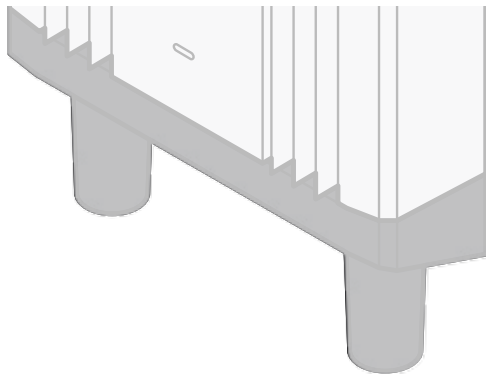

If you need further assistance, visit our [Help Center](#) or contact [Ubiquiti Support](#).